

DIY Upgrade: Zerorack System Instruction

Set includes:

- Zerorack mounting system
- 15x M5X20 screws
- 2X M5X10 screws
- 17x M5 nut
- silicone glue



Step 1 – Removing the old mounting system

1. Remove the lock




2. Remove the rails.



Step 2 - Adjusting the case to the Zerorack mount

1. Place the template on the case so that the four marked holes align with the existing holes in the case.

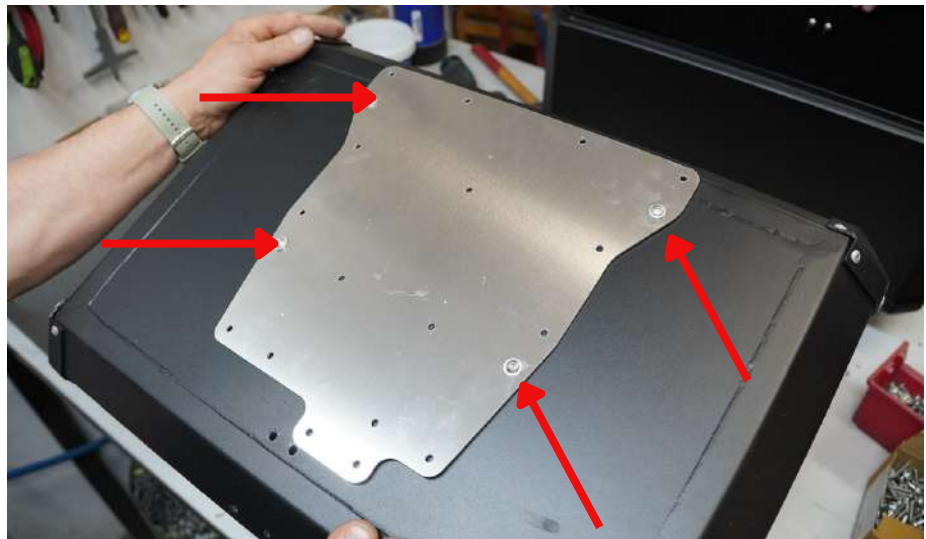

2. Drill the holes according to the pattern on the template plate using a 5 mm drill bit.




IMPORTANT!
Ignore these
holes, do not
drill!




Step 3 – Installing the Zerorack mounting system


1. Put the nuts in the proper spots in the bottom of the Zerorack mounting plate.

2. Push the nuts fully into the mounting bracket.

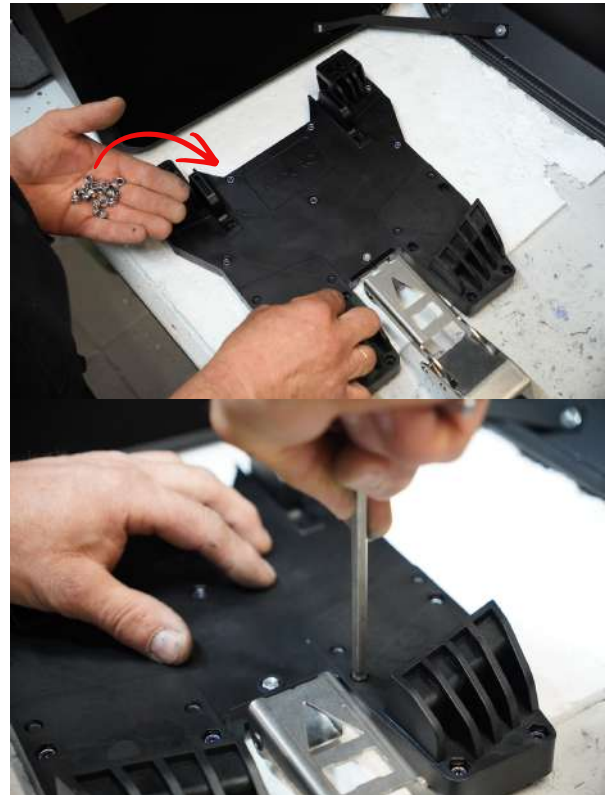


3. Apply glue to the screws attached to the Zerorack lock and to all screws used for installing the mounting system in the further steps.

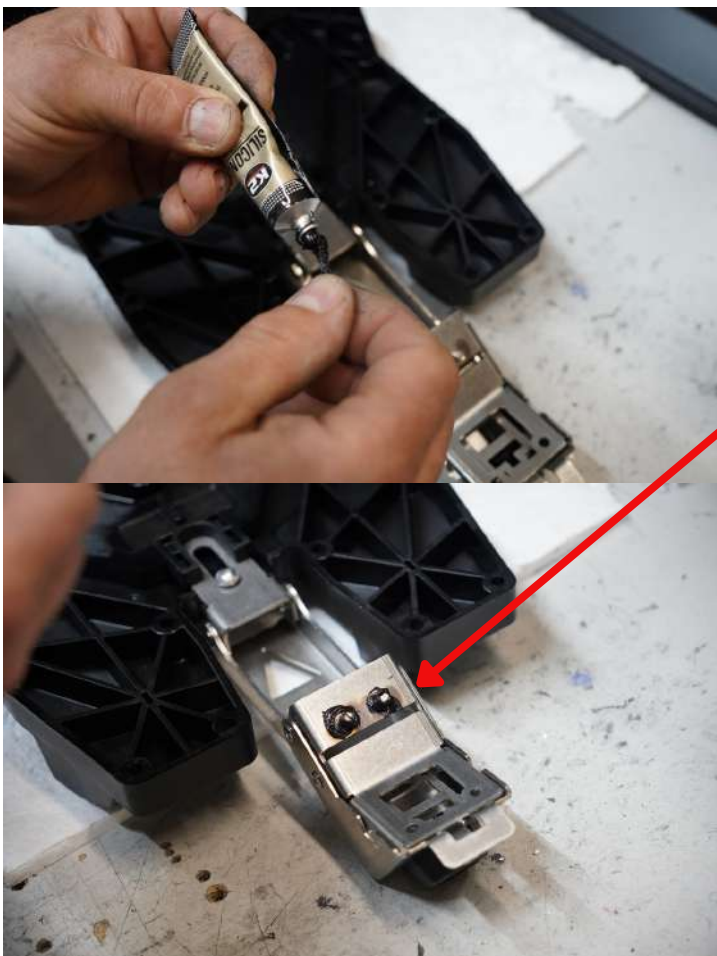

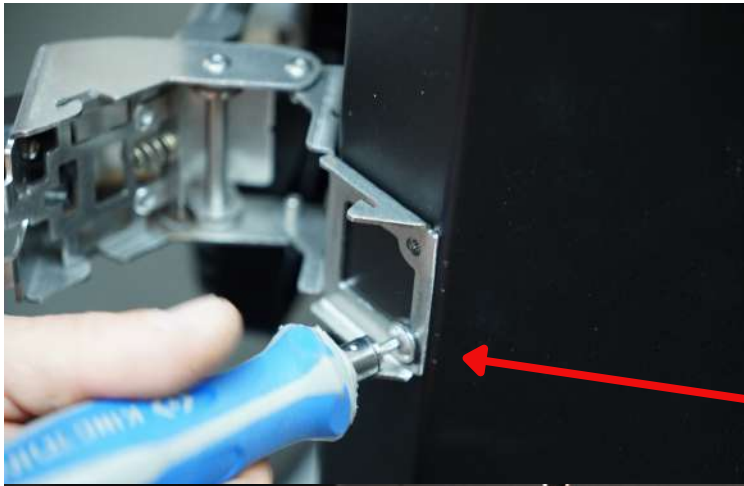

4. Use the supplied screws and nuts to install the lock (2xM5x10). From the inside of the case, also fit the washers using the ones from the previously removed mounting system.

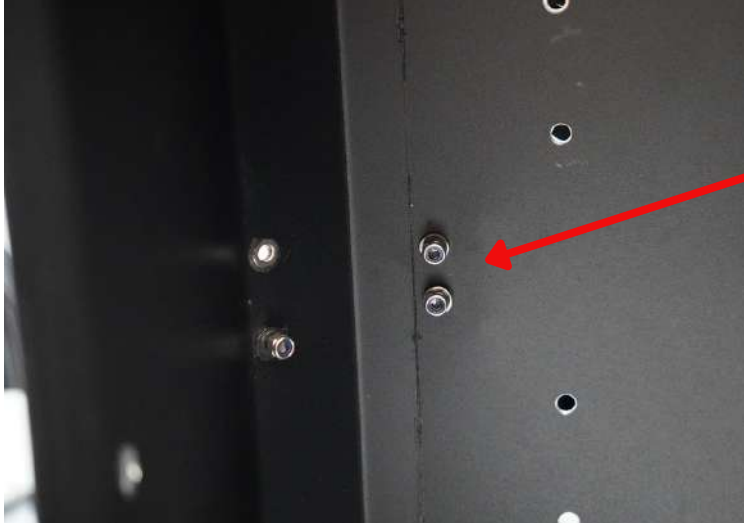

5. Place the screws in the proper holes to fit the nuts applied before in the bracket. Tighten all the mounting screws lightly at first (15x M8x20). Once all screws are in place, fully tighten them.





6. To seal the remaining holes in the bottom please use the attached Silicone glue.

Step 4 – Transferring the lock insert to the new mounting system

1. Place the key in the lock insert.



2. Use a thin tool to lift the latch, then pull the lock cylinder out.



3. Place the insert in the new
Zerorack bracket lock.



In case of any questions or problems please reach
us through the email or WhatsApp.

**Sincerely,
The APDURO Team**



info@apduro.pl



+48 664982745

APDURO